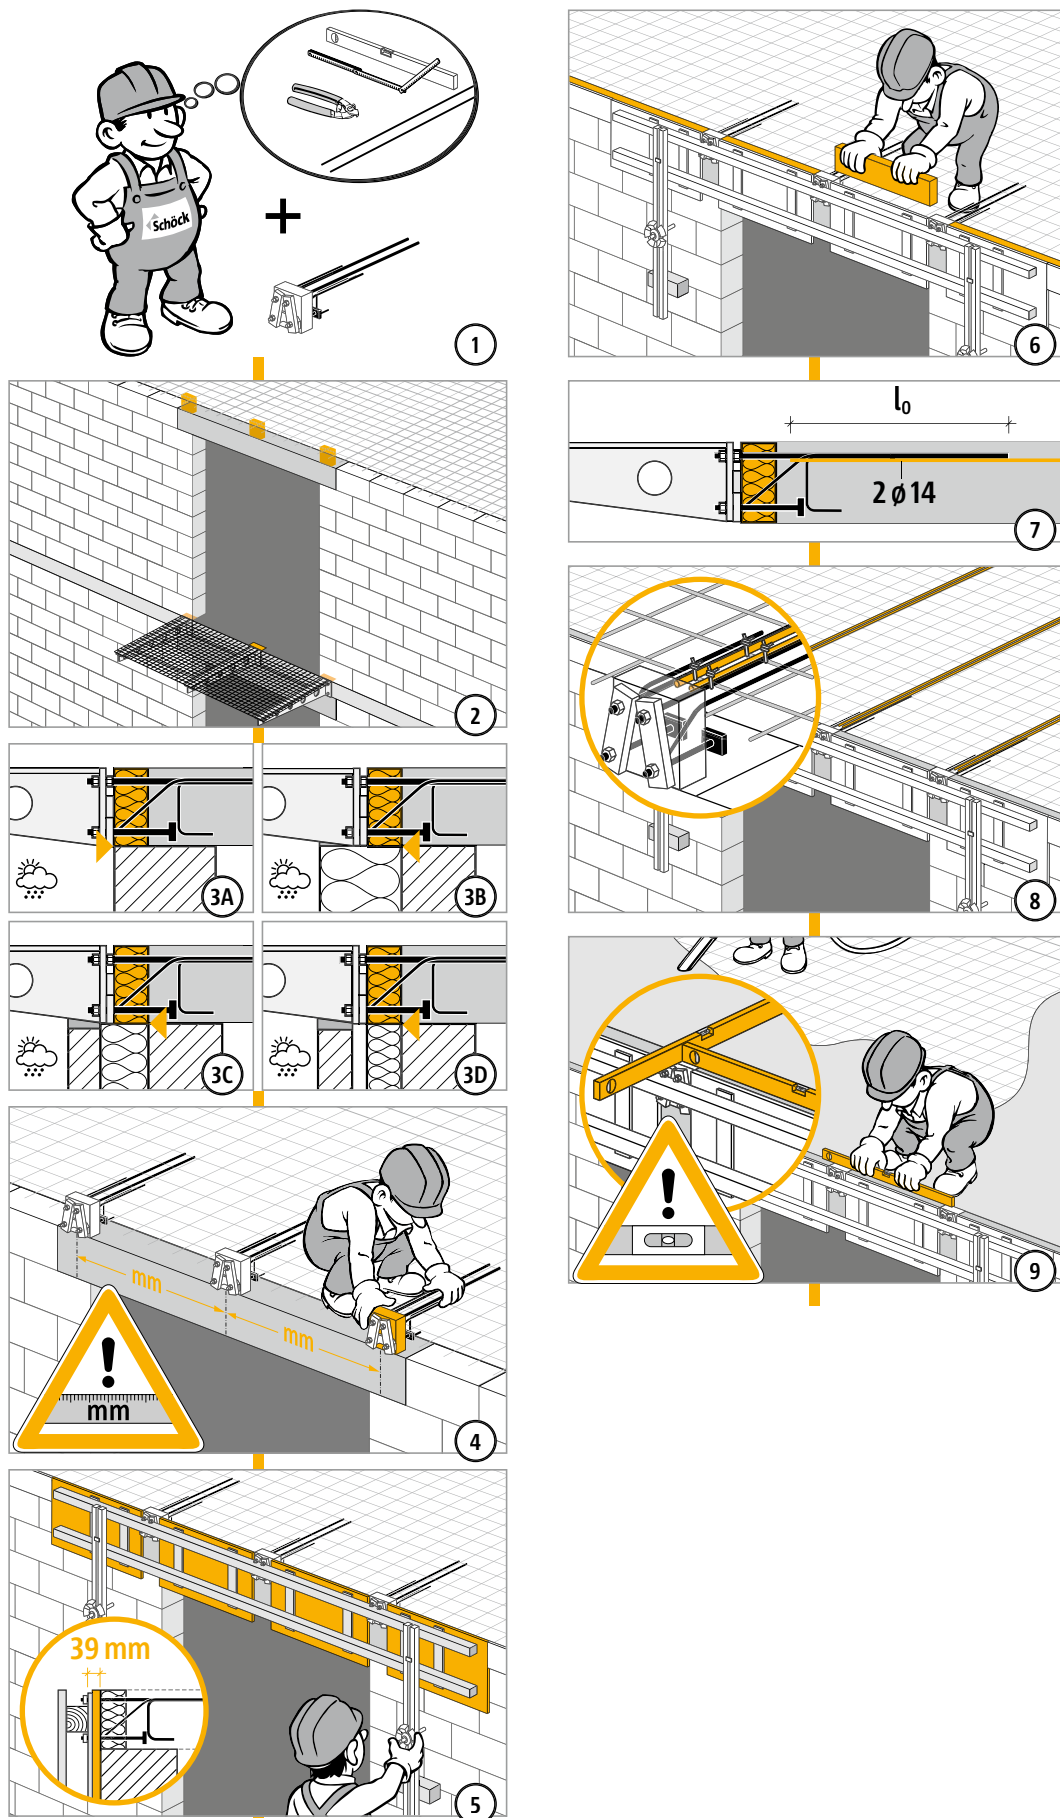


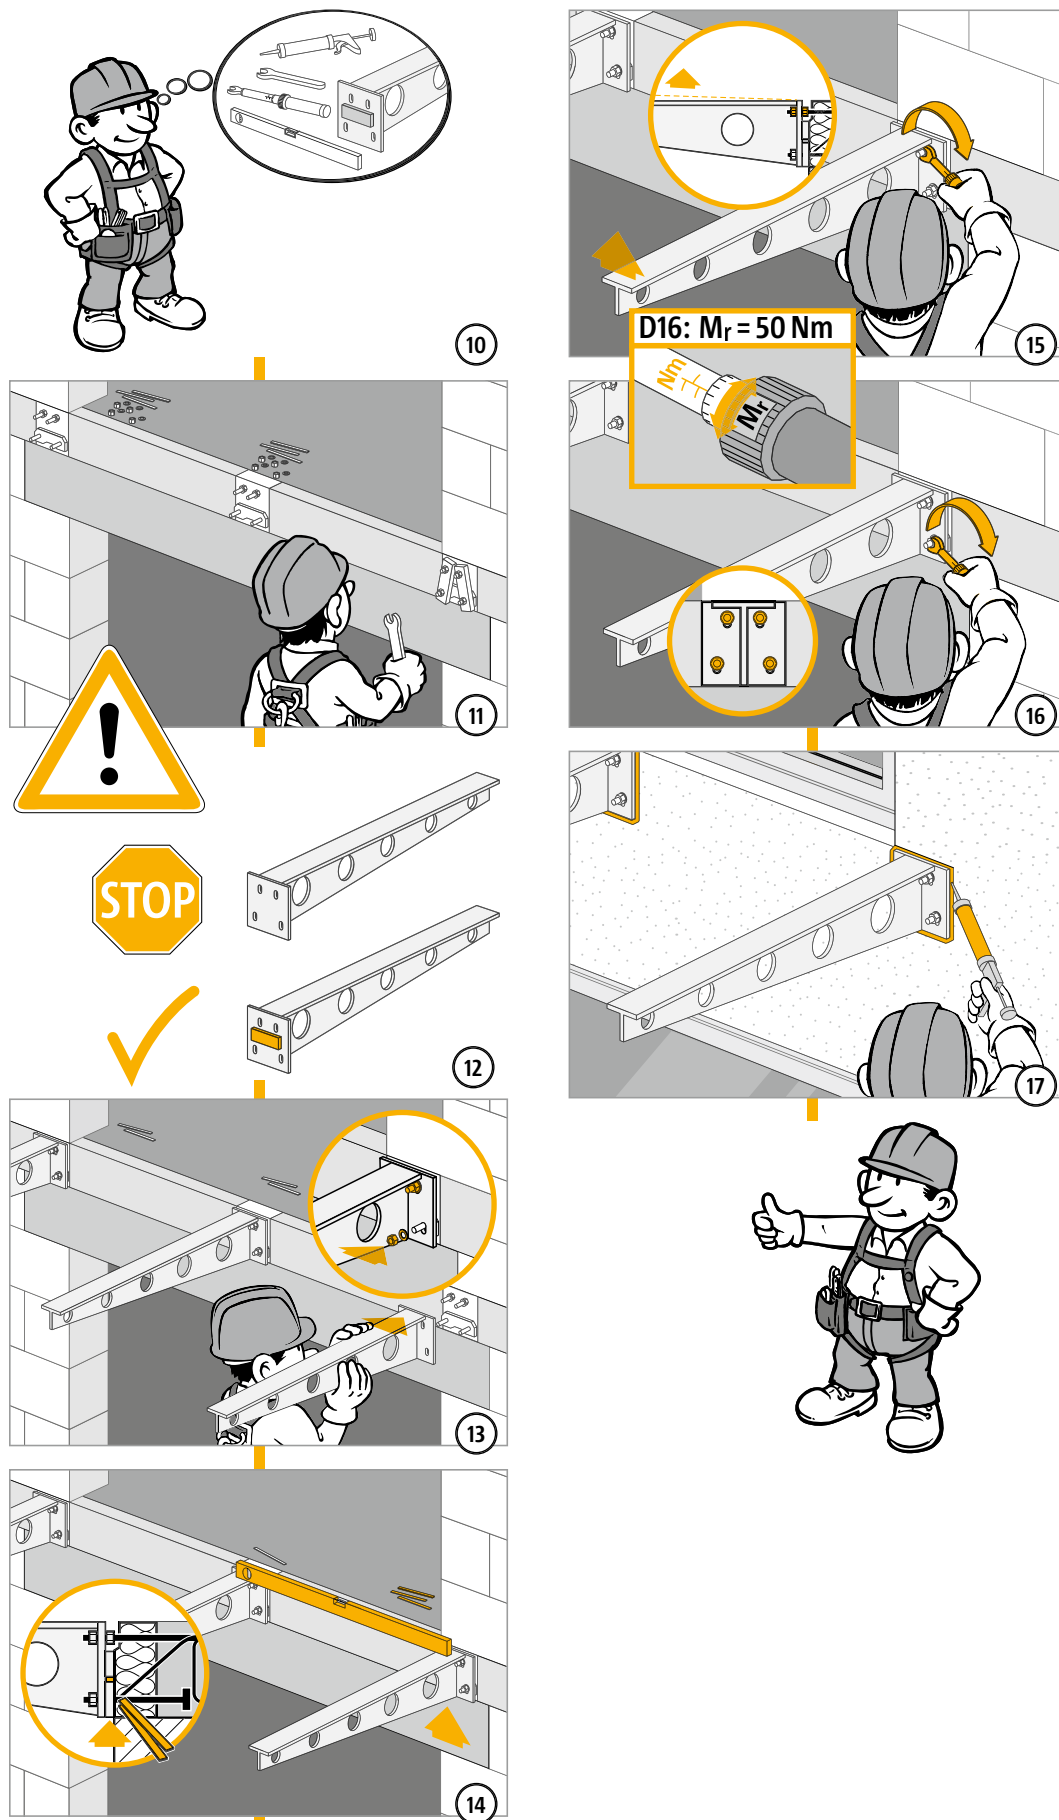
Installation instruction type SK-M1 - structural engineer



T
type SK

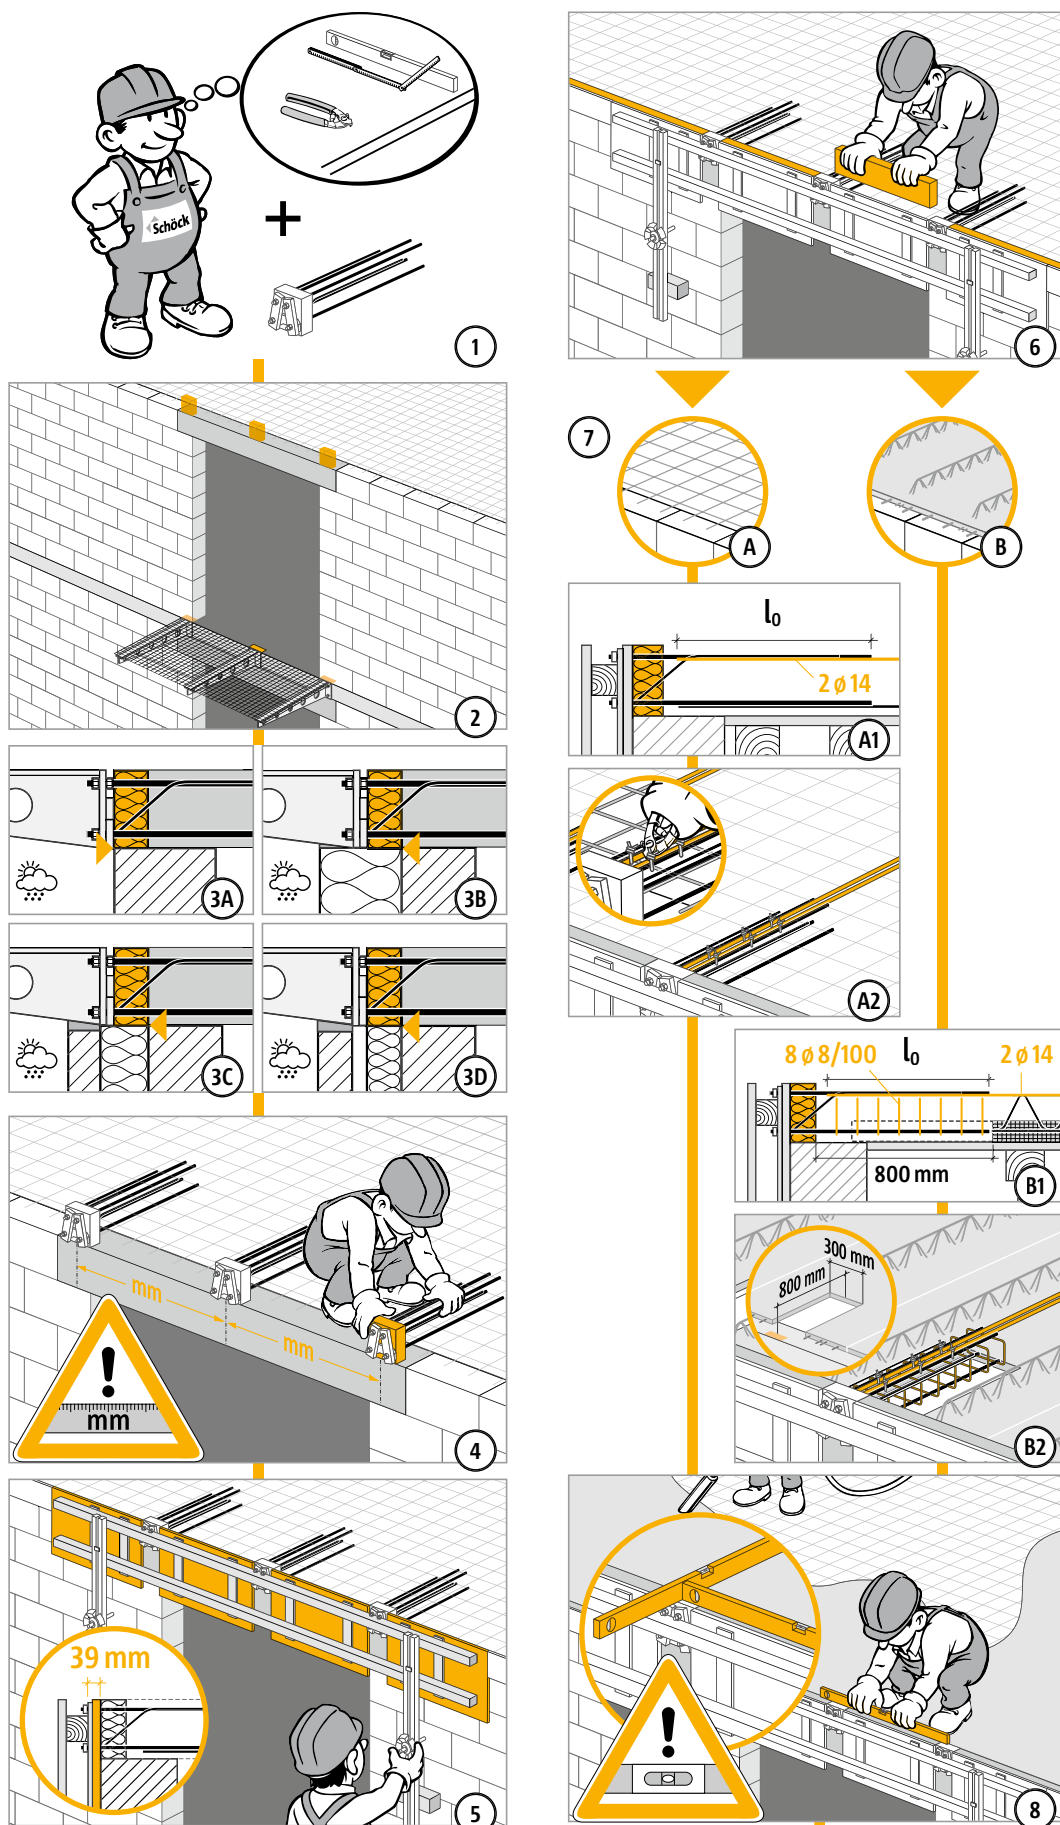
Steel – reinforced concrete

Installation instruction SK-M1 - steel constructor

T
type SK

Steel – reinforced concrete

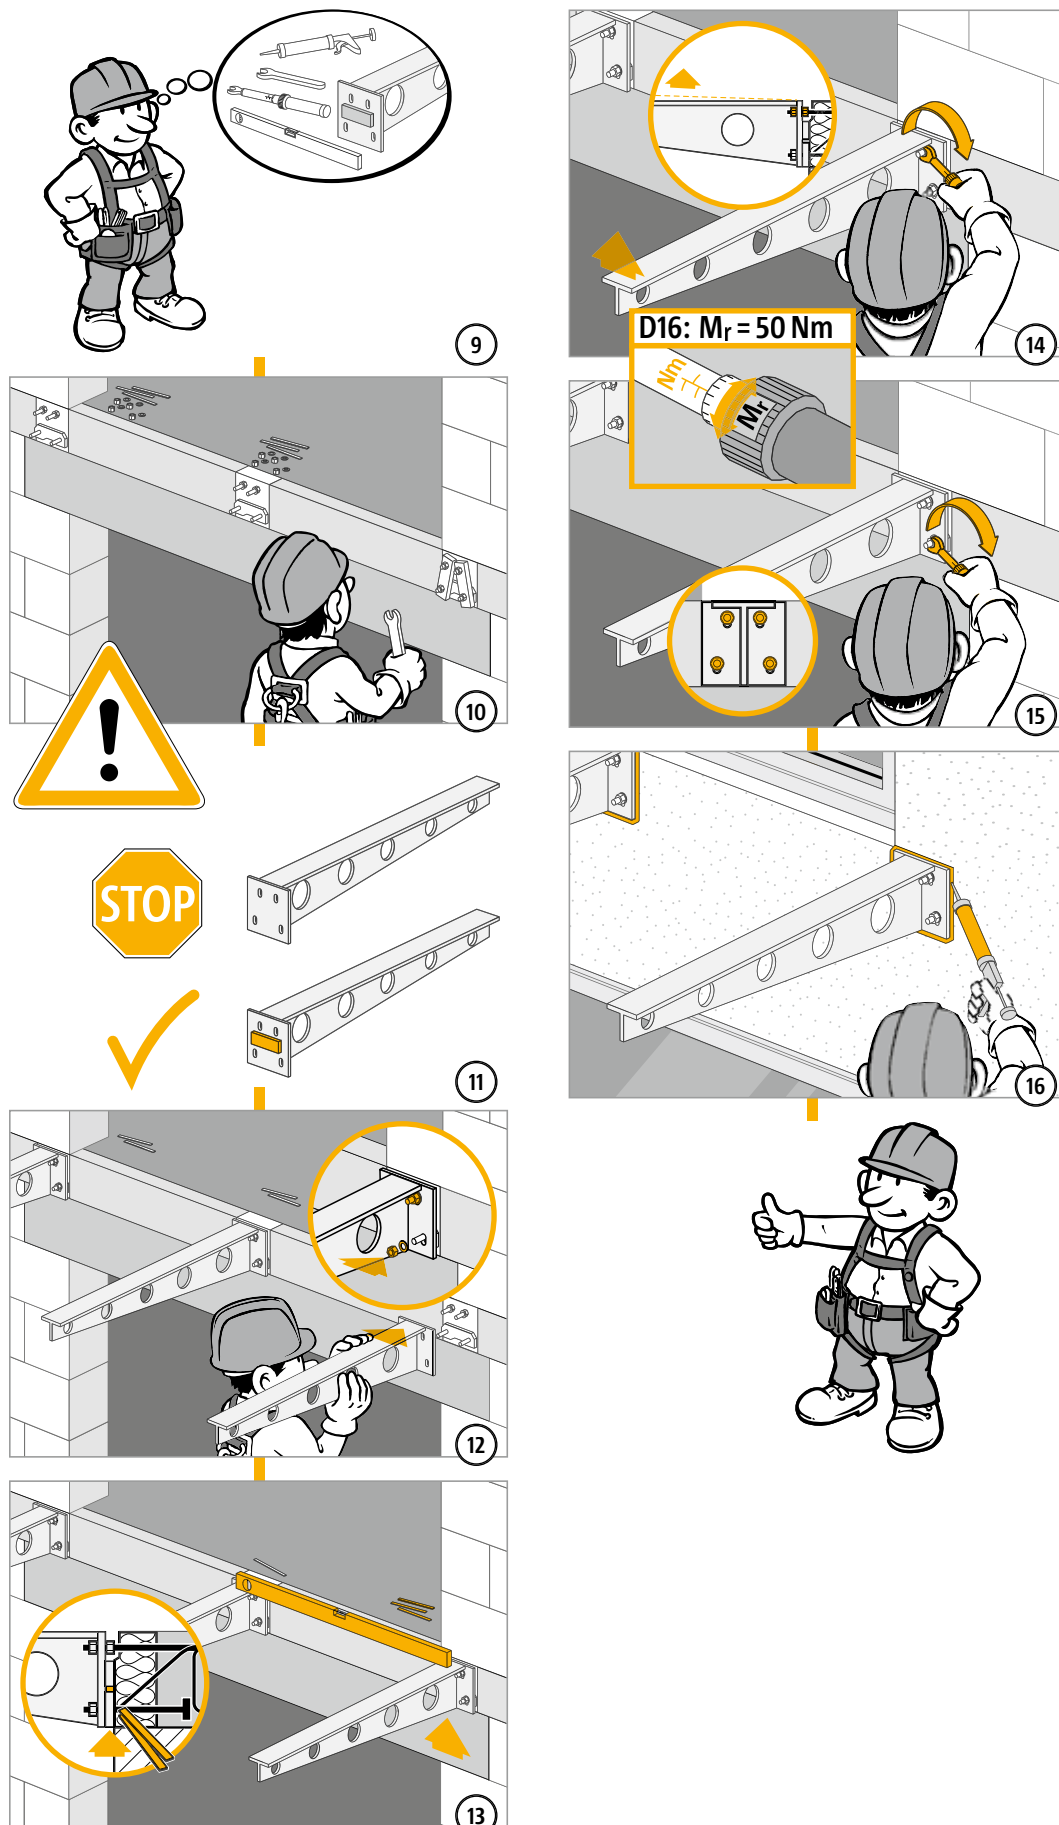
Installation instruction type SK-MM1 - structural engineer



T
type SK

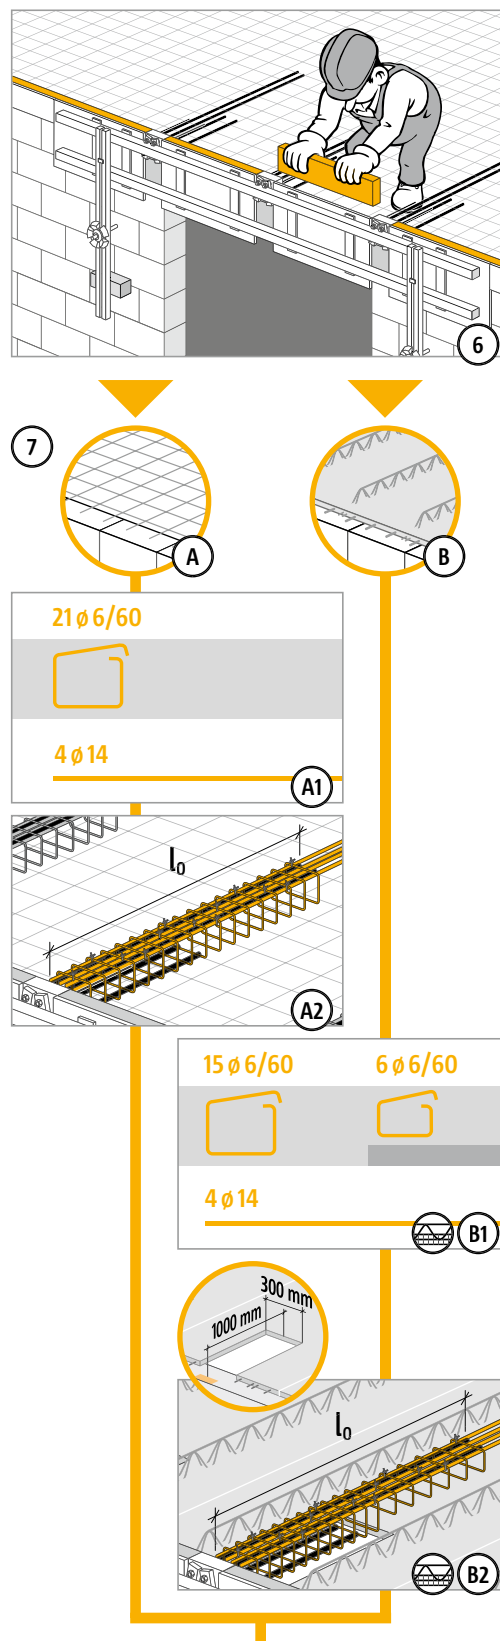
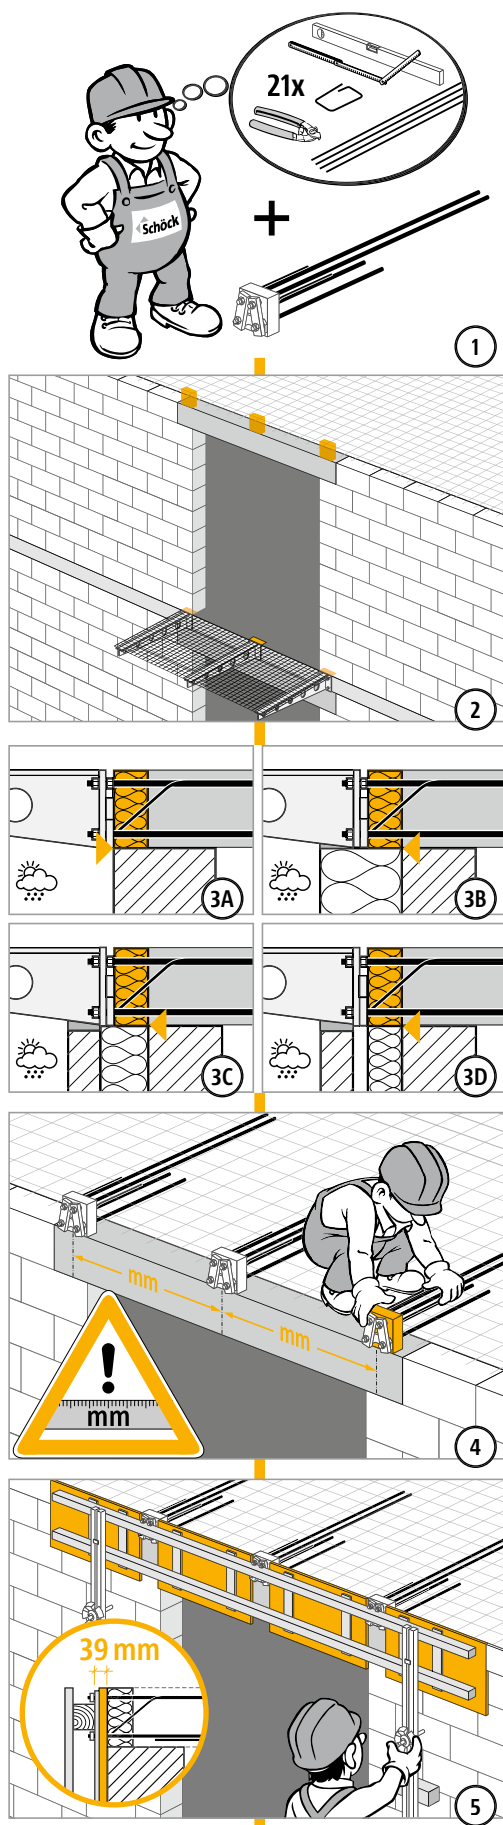
Steel – reinforced concrete

Installation instruction type SK-MM1 - steel constructor

T
type SK

Steel – reinforced concrete

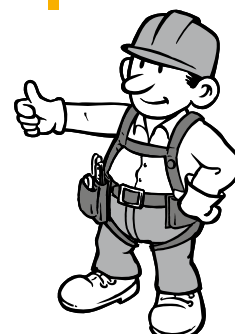
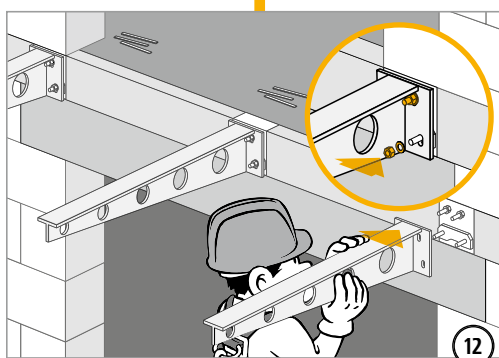
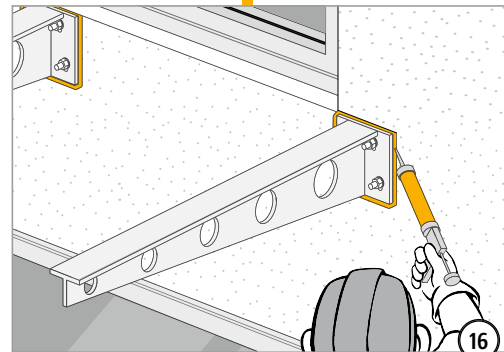
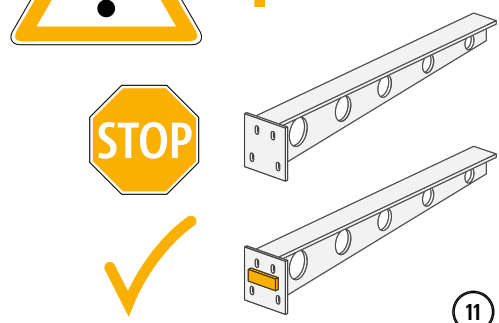
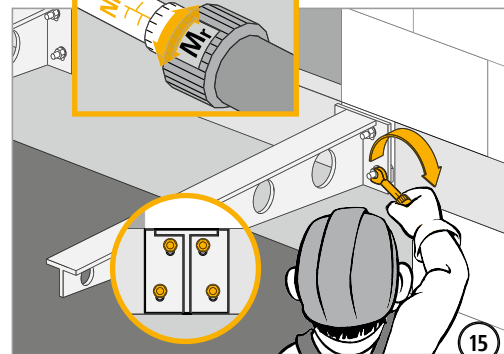
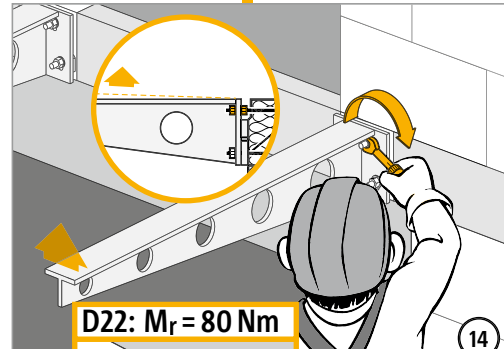
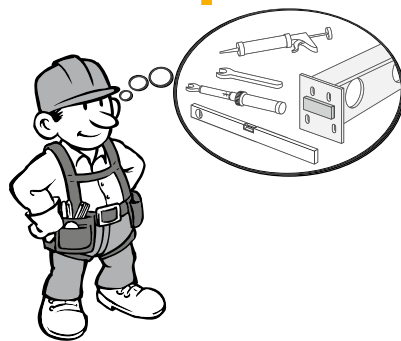
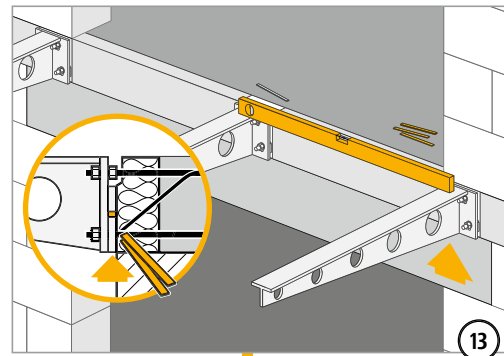
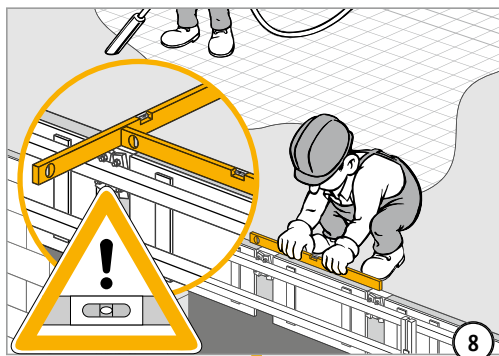
Installation instruction type SK-MM2 - structural engineer



T
type SK

Steel – reinforced concrete

Installation instruction type SK-MM2 - steel constructor

T
type SK

Steel – reinforced concrete